

BEMA101A

Automatic Vehicle Location

Operation 1:

STEP1 BEMA101A receives GPS satellite signal.

STEP2 BEMA101A forwards GPS position signal to control center server by GPRS.

STEP3 Control center can locate BEMA101A on local map or Google map, to manage vehicles.



Operation 2:

STEP1 BEMA101A receives GPS satellite signal.

STEP2 BEMA101A forwards GPS position signal to controller mobile phone using SMS.

STEP3 Controller can command BEMA101A or monitor BEMA101A using mobile phone SMS.



BOLYMIN, INC.